



### ZETEC-SE, manual transmission

12A522 Wiring harness – Engine control	F 4	C756	B 5
12A690 Wiring harness – Engine control	C 1	C864	E 1
9H589 Wiring harness – Engine control	D 5	C870	B 4
B8 ... Throttle Position Sensor (TPS)	B 3	C895	A 5
B43 .. Crankshaft position sensor	D 1	C902	C 5
B45 .. Knock sensor	B 1	C903	B 1
B135 .. Cylinder-head temperature sensor	C 5	C953	B 2
B142 .. Temperature manifold absolute pressure sensor	A 5	N17 .. Oil pressure switch	B 2
C95	F 3	N96 .. Power steering pressure switch	A 2
C641	E 5	N276 .. Transmission switch	E 1
C643	D 1	O5 ... Generator	B 4
C644	A 2	T1 ... Ignition coil	E 5
C703	B 3	Y13 .. Idle speed control valve	B 5