

3.5m

4.7m

- 1 motor (1.0)
- 2 ground (0.5)
- 3 motor (1.0)
- 4 clutch switch (0.35)
- 5 lock switch (0.35)
- 6 handle antenna (0.35)
- 7 handle antenna (0.35)
- 8 unlock switch (0.35)
- 9
- 10
- 11
- 12
- 13

- 1 motor (1.0)
- 2
- 3 motor (1.0)
- 4 clutch switch (0.35)
- 5
- 6
- 7
- 8 unlock switch (0.35)
- 9 ground (0.5)
- 10
- 11
- 12
- 13

3M5T-14489-SNA

C47 levé přední

3M5T-14489-SNA






C51 pravé přední

3M5T-14489-SNA

C53 levé zadní

3M5T-14489-SNA

C55 pravé zadní

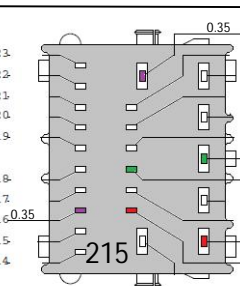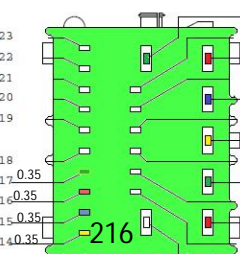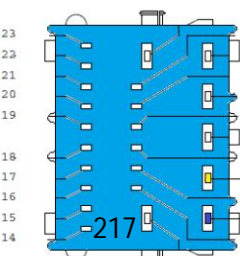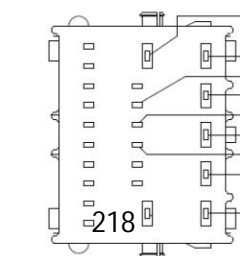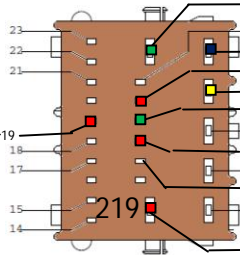

1S7T-14489-BC


centrální odemknutí

zem


zem

C58/11 signál odemknutí kufru


C58/12 spínač zamknutí auta

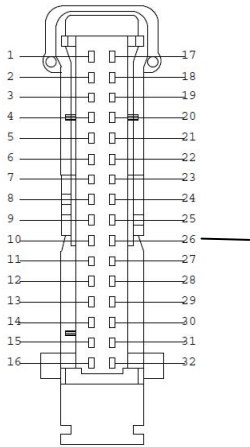


YS6T-14489-RZA
C809
TO INSTRUMENT CLUSTER

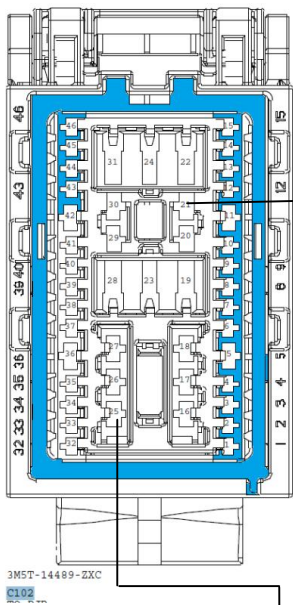


3MST-14489-ZXC
C109

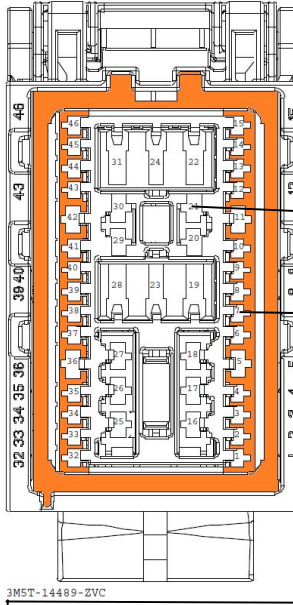


3MST-14489-ZVC
C100

 

1L2T-14489-GB
C391
TO PATS RF MODULE

 


XP2T-14A464-AA
C231
TO ELEC STEERING COLUMN LOCK (ESCL)

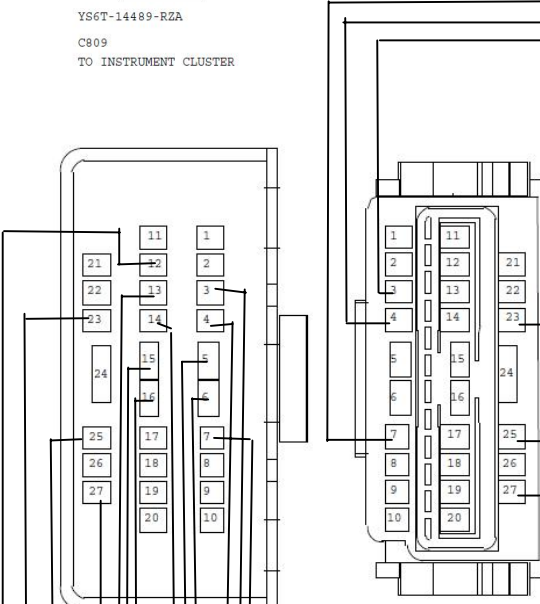


C118

světla
C320-12

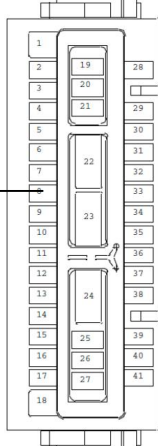

3MST-14489-DRD
C111

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10
- 11
- 12
- 13
- 14
- 15
- 16
- 17
- 18
- 19
- 20
- 21
- 22
- 23
- 24
- 25
- 26
- 27
- 28
- 29
- 30
- 31
- 32
- 33
- 34
- 35
- 36
- 37
- 38
- 39
- 40
- 41

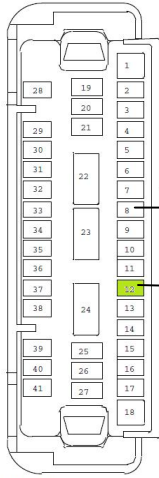

3MST-14A459-DRD
C111
TO 14401
HARNESS 14K733


R4-4

startér


pedál

R4-1

displej?
C809-26

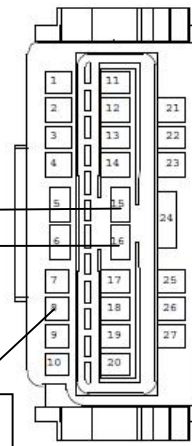


3MST-14489-EPD
C112
TO 14014
HARNESS 14401

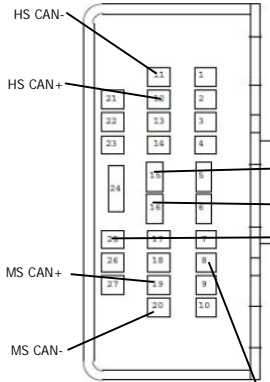

3MST-14A459-EPD
C112
TO 14401
HARNESS 14014

spojka?

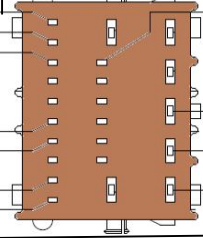

HS CAN-
HS CAN+

